



RPA-1 Preamp

User Manual

DXE-RPA-1-INS-Revision 0
PATENT PENDING



©DX Engineering 2004
P.O. Box 1491 · Akron, OH 44309-1491
Phone: (800) 777-0703 · Tech Support and International: (330) 572-3200
Fax: (330) 572-3279 · Email: DXEngineering@DXEngineering.com

Table of Contents

INTRODUCTION

Additional Requirements 4

SPECIFICATION

Specifications Glossary 5

Third Order Intercept 5

THEORY OF OPERATON

Special Features of the RPA-1 7

INSTALLATION AND MAINTENACE

Mounting 8

Mounting at the antenna 9

Determining the sensitivity 9

Connecting the power supply 9

Powering through the coax 10

Reducing gain 10

Maintenance 11

Lightning 11

WARRANTY

Warranty 12

Warranty

5

Technical Support

If you have questions about this product, or if you experience difficulties during the installation, contact DX Engineering at (330) 572-3200. You can also e-mail us at DXEngineering@DXEngineering.com. For best service, please take a few minutes to review this manual before you call.

Warranty

All products manufactured by DX Engineering are warranted to be free from defects in material and workmanship for a period of one (1) year from date of shipment. DX Engineering's sole obligation under these warranties shall be to issue credit, repair or replace any item or part thereof which is proved to be other than as warranted; no allowance shall be made for any labor charges of Buyer for replacement of parts, adjustment or repairs, or any other work, unless such charges are authorized in advance by DX Engineering.

If DX Engineering's products are claimed to be defective in material or workmanship, DX Engineering shall, upon prompt notice thereof, issue shipping instructions for return to DX Engineering (transportation-charges prepaid by Buyer). Every such claim for breach of these warranties shall be deemed to be waived by Buyer unless made in writing.

The above warranties shall not extend to any products or parts thereof which have been subjected to any misuse or neglect, damaged by accident, rendered defective by reason of improper installation, damaged from severe weather including floods, or abnormal environmental conditions such as prolonged exposure to corrosives or power surges, or by the performance of repairs or alterations outside of our plant, and shall not apply to any goods or parts thereof furnished by Buyer or acquired from others at Buyer's specifications. In addition, DX Engineering's warranties do not extend to other equipment and parts manufactured by others except to the extent of the original manufacturer's warranty to DX Engineering.

The obligations under the foregoing warranties are limited to the precise terms thereof. These warranties provide exclusive remedies, expressly in lieu of all other remedies including claims for special or consequential damages. SELLER NEITHER MAKES NOR ASSUMES ANY OTHER WARRANTY WHATSOEVER, WHETHER EXPRESS, STATUTORY, OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS, AND NO PERSON IS AUTHORIZED TO ASSUME FOR DX ENGINEERING ANY OBLIGATION OR LIABILITY NOT STRICTLY IN ACCORDANCE WITH THE FOREGOING.

©DX Engineering 2005

DX Engineering®, DXE®, Hot Rodz™, Maxi-Core™, Antenna Designer™, Yagi Mechanical™, and Gorilla Grip™ Stainless Steel Boom Clamps, are trademarks of PDS Electronics, Inc. No license to use or reproduce any of these trademarks or other trademarks on this web site is given or implied. All other brands and product names are the trademarks of their respective owners.

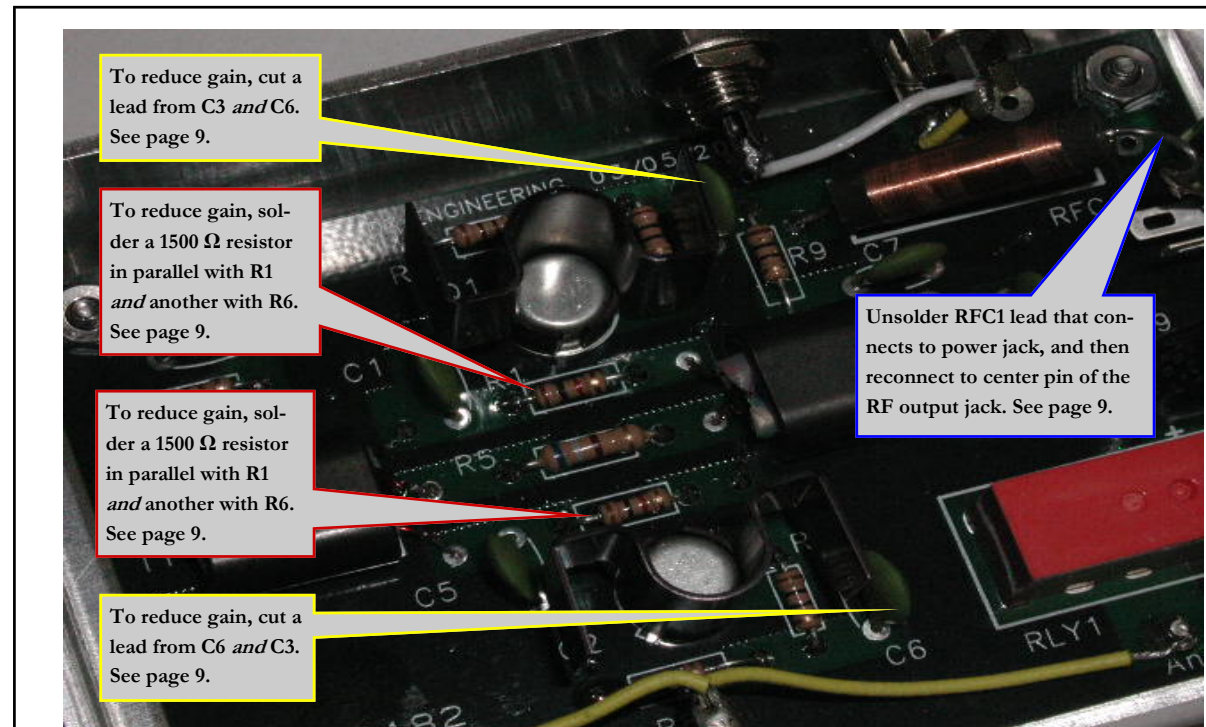


Figure 3. Circuit board illustrates how to reduce the gain and power the unit through the coax.

Maintenance

The RPA-1 requires virtually no maintenance as long as the unit is not exposed to direct sunlight, moisture, or extreme temperatures. But as with any electrical device, lightning is a concern.

Lightning

While most amateur radio operators rarely suffer damage from lightning (even though they never disconnect their equipment), the best protection is to disconnect electrical devices during storms. The key to proper lightning survival is proper grounding of feedlines and equipment, and maintaining integrity of shield connections. A proper installation improves lightning protection and enhances weak-signal receiving performance. Consult lightning protection and station grounding information in the ARRL handbooks, the NAB Broadcast Handbook or other reliable sources.

1 Introduction

Congratulations on your purchase of the RPA-1 receiver preamplifier. Its unique combination of push-pull design and robust components provides significantly better performance than other preamplifiers on the market, so we know you are anxious to get started. Before you install the RPA-1, take a few minutes to read this brief user guide and familiarize yourself with the installation, operation and safety procedures. We are confident that you will find this preamp easy to use and that it will reward you with years of faithful service.

Additional Requirements

Please note you will need the following items (not included in this package) to install and operate the RPA-1 receiver preamplifier:

- ➔ **Power Source** The RPA-1 requires a negative ground, 10-18 Vdc @200mA min power source that is not included. Depending on the supply current, you might also need an inline fuse. Powering the RPA-1 through the coax feedline requires a voltage injector circuit or a DX Engineering FVI-1 Voltage Injector that includes a power supply. Refer to *Connecting the Power Supply* on page 9 for details.
- ➔ **Sealant** If you opt to mount the unit outdoors, you will also need a silicon-based sealant, such as 100% pure silicone RTV (DX Engineering part number RTV598335). Refer to *Installation and Maintenance* at the top of page 8 for complete information.

Specifications

2

The specifications in the table below represent typical performance from the RPA-1 preamplifier:

<p>Power Requirement: 10-18 Vdc @ 140 mA maximum Output TOI (Third Order Intercept): +43 dBm @ 13 Vdc Noise figure: 3.5 dB One dB Compression: +26 dBm (~.4 watts output) Gain: 16 dB from 300 kHz to 35 MHz (+1.5 to -1.5 dB over this range) 500 Hz BW IM3 Dynamic range: 110 dB or greater</p>
--

Specifications Glossary

The following are simplified explanations of the specifications highlighted in the table above.

Third Order Intercept A standard measure of how well a receiving system performs in the presence of strong nearby signals. The higher the third order intercept (TOI), the less likely adjacent strong signals will cause interference. The RPA-1 offers substantially improved TOI over competitive preamplifiers and communication receivers.

Noise Figure The ratio of equivalent noise power developed at the input to that generated by thermal noise in the source resistance, usually expressed in decibels. If it were possible, a perfect amplifier would have a noise figure of 0 dB. The RPA-1 is extremely quiet, and does not contribute noticeable noise to receiving systems.

Dynamic range The ratio of the faintest signal detected to the loudest signal amplified without significant distortion, typically expressed in decibels. The RPA-1 allows you to hear faint signals in the presence of adjacent strong signals.

Gain The ratio of signal input to output. The RPA-1 features a high gain that is easily reduced if not needed.

The RPA-1 power connector uses a standard 2.1mm barrel type plug. (included) A traditional 500 mA, or larger “wall wart” with 12 Vdc negative-to-shell plug wiring, is generally adequate for powering the RPA-1. You can also use a larger, regulated supply provided it supplies 10-18 Vdc negative ground, has the power plug shell connected to negative, and has an inline 1A fuse. **WARNING!** *Be sure the supply polarity and voltage are correct.*

Powering through the coax

The external power connector is normally active, but components are inside the RPA-1 to allow powering through the coaxial feedline. To change the power feed, refer to Figure 3 at the top of next page, and do the following:

Caution: *Do not nick, scratch, or break the fine wires on the choke. Do not grab the choke body with pliers.*

1. Unsolder the 100 uH RF choke lead that connects to the power jack.
2. Connect the free choke lead to the PC board indicated by the choke outline.

NOTE: *A 12-18-Vdc positive power source must be inserted in the feedline center conductor through a similar 100 uH choke and the voltage must be blocked from appearing at the receiver. A DX Engineering FVI-1 voltage injector, which includes a power supply, can also be used.*

Reducing gain

If signals are overloading your receiver or if background noise is excessively high, there are two solutions. The first solution involves adding a conventional attenuator pad either leading or following the RPA-1. Addition of a pad on the input will reduce noise figure roughly by the amount of the attenuation. This is usually not a problem with modest antenna efficiency. At the same time noise figure decreases, input intercept (overload limits) will increase. Addition of an attenuator pad on the RPA-1 output reduces output intercept. Input intercept and noise figure remain essentially unchanged.

As a general rule, reduction of gain with a pad at either spot will not compromise system performance. This is because the RPA-1 design has a very large performance margin in both noise figure and intercept. You can also reduce gain about 3 dB, from 17 to 14 dB, by cutting one lead of C3 and C6. (Since this is a push-pull circuit, both capacitors must be removed. See Figure 3 on next page). If additional gain reduction is still necessary, solder a 1500-ohm 1/4 watt resistor in parallel with R1 and another in parallel with R6 to reduce the gain to 10 dB. Be aware internal gain reduction modifications will cause the upper frequency performance to fall off at approximately 15 MHz or higher.

Mounting at the antenna

Ordinarily, the preamplifier should be mounted at the operating position, rather than at the antenna. There are a few exceptions, however, including:

- **Pennants, flags, and K9AY loops in quiet locations.** These antennas have relatively low sensitivity or gain. When used in quiet locations, they do not provide much background noise to the system. If the feedline loss is high, performance might improve with the preamplifier mounted near the antenna.
- **Small loops (magnetic loops).** These antennas also lack sensitivity, and may require mounting the amplifier near the antenna when cable runs are lossy.

Determining the sensitivity

The following is a simple method to confirm adequate sensitivity. This test generally requires the assistance of another operator:

1. Listen at the quietest expected operating time with the receiver set to its narrowest selectivity.
2. Remove all receiving antennas from all feedlines.
3. Replace the antennas with a resistor load of the same impedance as the antennas.
4. When the load is substituted for the antenna, a noticeable decrease in noise should occur.

It is advantageous to have receiver AGC action begin just above noise floor, while avoiding excessive levels of background noise. This usually occurs when there is a perceptible increase in S meter reading, when the antenna is connected. If background noise is high or your receiver is overloaded, you can add an attenuator pad or remove power from the RPA-1. Removing power bypasses the RPA-1.

Connecting the power supply

The RPA-1 requires a well-filtered 10-18 Vdc source with a negative ground. A wall-wart or station power may be used, but must have an inline 1 or 2 ampere fast-blow fuse if the supply is capable of providing more than 1A of current. Place the fuse at the power supply, rather than at the RPA-1.

Third Order Intercept

Figure 1 below illustrates a typical production RPA-1 output third order intercept measurement. The RPA-1 is significantly more immune to overload than the best commercial amateur receivers. Third order products are 50 dB below +18 dBm output.

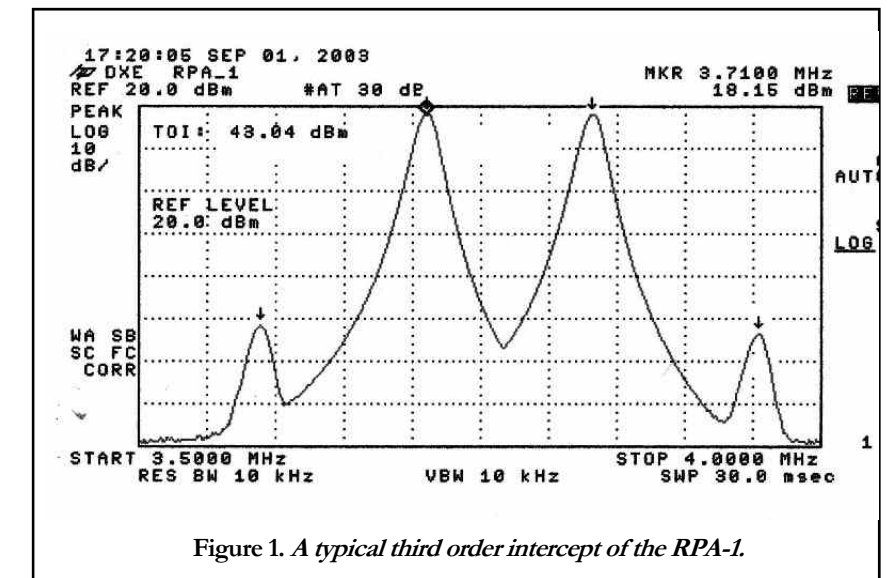


Figure 1. A typical third order intercept of the RPA-1.

Theory of Operation

3

The RPA-1 is a high performance broadband LF and HF receiver preamplifier that features exceptional immunity to overload. It also has a low input SWR, and an excellent noise figure. The amplifier is constructed of quality components mounted on a sturdy, G-10 fiberglass circuit board. The circuit board mounts in an aluminum enclosure suitable for indoor or outdoor use. RF connectors are RCA phono and type F CATV fittings. Performance is optimized for 350 kHz to 35 MHz, where dynamic range and third order intercept are typically more than 20 dB (one hundred times) better than conventional preamplifiers.

Special Features of the RPA-1

- Powered by 10-18 Vdc through the coax, enabling remote operation at the antenna, or to the 2.1mm connector
- Push-pull operation eliminates harmonic distortion
- High quiescent current increases ability to handle strong signals without distortion or overload
- RCA phono and CATV F fittings ease installation
- Simplified switching—automatic bypass eliminates gain when dc power is off
- Meticulous craftsmanship and durable components provide superior dynamic range

4

Installation and Maintenance

For best results, mount the RPA-1 in a well-ventilated area away from direct sunlight and moisture. Constant operation in ambient temperatures above 150°F (65°C) will shorten the life of the RPA-1, and should be avoided. It is acceptable to mount the RPA-1 outdoors if the upper seams of the box are sealed with an outdoor silicon RTV sealant or coax seal. Lower gaps or seams must be left open to allow condensation drainage. Mount the flanges of the box flat against a horizontal surface, or with the two mounting flanges positioned in a vertical line as shown in Figure 2 below.

Warning! *Never transmit through RPA-1. The unit can be damaged by direct application of transmitter power greater than 1 watt.*

Mounting

Optimum electrical location of the RPA-1 varies with antenna system background noise level. A good receiving system requires the antenna to establish system noise, rather than amplifying devices. One common myth is that preamplifiers must be mounted at or near antennas to be effective. This is not true at VHF and lower frequencies, unless feedline loss is high and the antenna has very low background noise. Another common misconception is that mounting at the antenna feedpoint reduces feedline noise pickup. The location of the amplifier rarely makes a difference in feedline noise. Most feedline noise couples back to the antenna at the antenna terminals, it does not leak directly into the feedline.

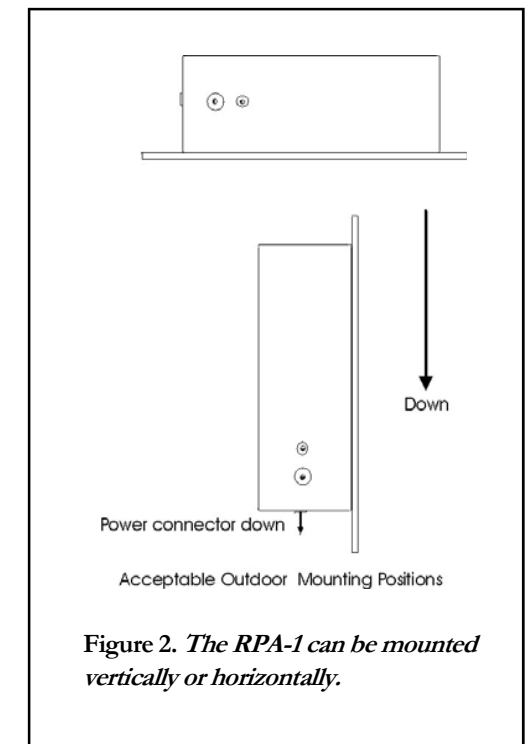


Figure 2. *The RPA-1 can be mounted vertically or horizontally.*